

TruCare Wall Primer

Asian Paints TrueCare Wall primer is suitable for use as a primer for painting of any water-based wall finishes. This can be used on interior or exterior surfaces as a primer.



WATER BASED

LEAD FREE GUARANTEE

PRODUCT BENEFITS

Asian Paints TrueCare Wall primer can be thinned to application viscosity by adding appropriate amount of water. It's special features are easy brushing, excellent covering, alkali resistance, quick drying and good sealing properties. It is specially fortified with fungicides.

PRODUCT FEATURES

SURFACE



INTERIOR EXTERIOR

AVAILABLE PACKS



Shelf life: 3 years from date of manufacture in original tightly closed containers away from direct sunlight and excessive heat.

COLOURS AVAILABLE



Please note: TrueCare Wall primer is an undercoat

COVERAGE

On smooth masonry surface by brushing

1 COAT


Up to 225 sq.ft/ltr

DRYING TIME TO TOUCH



20 MINS

RECOMMENDED USAGE

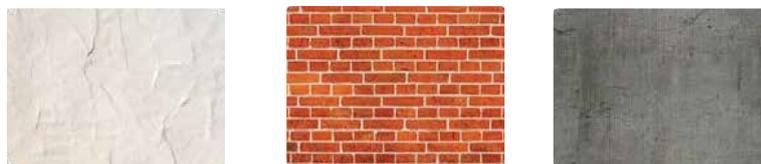

Can be used for priming plastered walls, brick work, concrete, etc

HOWTO APPLY

PRE PAINTING STEPS



PLASTER New masonry surfaces must be allowed to cure completely. It is recommended to allow 28 days as the curing time for new masonry surfaces.



CLEANING Surface should be free from any loose paint, dust or grease. Growths of fungus, algae or moss should be removed by wire brushing and water. In case of areas having excessive dampness use Asian Paints DampBlock to limit further dampness. When the underlying surface exhibits chalkiness, in spite of thorough surface cleaning, use Asian Paints SmartCare Exterior Sealer.



FILLING FOR CRACKS For filling cracks upto 3mm use Asian Paints SmartCare Crack Seal.



FILLING FOR HOLES & DENTS In case of dents and holes use Asian Paints AP Kote Wall Putty or white cement and fine sand in the ratio 1:3

APPLICATION PROCESS

APPLICATION	CODE	THINNER	DILUTION %	APPLICATION VISCOSITY ¹	RECOATING PERIOD
STEP 1 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
STEP 2 TrueCare PRIMER BRUSH / SPRAY	AP60	WATER	1:1	BRUSH 20 - 22	3 - 4 HRS
STEP 3 AP KOTE WALL PUTTY PUTTY KNIFE	AP33		BASED ON REQUIREMENT	SUPPLY CONSISTENCY	4 - 6 HRS
STEP 4 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
STEP 5 Truecare Wall Primer (BRUSH / SPRAY	AP60	WATER	1:1	BRUSH 20 - 22	3 - 4 HRS
STEP 6 SANDING					
SAND THE SURFACE WITH SAND PAPER 320 AND WIPE CLEAN					

1. As measured through a Ford cup.
2. Recoat period is quoted for 25°C and 50% Relative Humidity, these may vary under different conditions.

ADDITIONAL INFORMATION

POST PAINTING CARE

For the best performance of the paint, ensure proper washing and cleaning of all algal and fungal growth, if any, at regular intervals of six months.

TECHNICAL DETAILS

- a. **Drying time:** Surface dry time 30 min
- b. **Finish :** Matt and smooth
- c. **Flash point IS101/1987 Part 1, Sec 6:** NA
- d. **Stability of thinned paint:** To be used within 24 hours
- e. Total Lead content below 90ppm.

PRECAUTIONS

- > Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hrs of application.
- > Do not over-thin or over-extend the brush.

SAFETY FEATURES

- > Kindly refer to the MSDS for Asian Paints TrueCare Wall primer which gives detailed information on safety measures while handling the paint, which is available on request.
- > Store the container with the lid tightly closed in an upright position, in a cool, dry place.
- > Keep out of reach of children and away from eatables.
- > May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- > Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- > In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- > Do not breathe vapour or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation
- > Do not pour leftover paint down the drain or in water courses.
- > In the event of spills, contain spillage using sand or earth.
- > No added Lead, Mercury or Chromium compounds.