Oo asianpaints

PRODUCT CODE 0057

Tractor Emulsion Shyne

Asian Paints Tractor Emulsion Shyne gives a smooth, shiny finish to the wall. It is a smart choice if you have been previously using distemper.

PRODUCT BENEFITS

Tractor Emulsion Shyne is the perfect way to make a smart upgrade from distempers. It offers the finish of plastic paint, at a cost that is not too different from distemper. it gives higher coverage as compared to distemper, so you need less material. It also lasts for at least 3 - 4 years, so you don't have to paint that often.

Tractor Emulsion Shyne offers your walls a soft sheen finish, making it the first Economy Emulsion to do so.

Tractor Emulsion Shyne offers a wide range of shades (1000+). So you can choose your favourite colours for your home.










PRODUCT FEATURES

WASHABILITY



COLOURS AVAILABLE

*Currently available in more than 1000 shades as per the Asian Paints Colour Spectra.



COVERAGE



2 COATS

130 - 150 sq.ft/ltr**

sq.ft/ltr**

**Actual coverage may vary from the quoted coverage due to factors such as method and condition of application and surface roughness and porosity.

AVAILABLE PACKS



Shelf life: 3 years from date of manufacture in original tightly closed containers away from direct sunlight and excessive

FINISH



HOW TO APPLY

PRE PAINTING STEPS



PLASTER New masonry surfaces must be allowed to cure completely. It is recommended to allow 28 days as the curing time for new masonry surfaces

CLEANING Surface should be

free from any loose paint, dust or

grease. Growths of fungus, algae



or moss should be removed by wire brushing and water. In case of areas having excessive dampness use Asian Paints DampBlock to limit further dampness. FILLING FOR CRACKS For filling cracks upto 3 mm use Asian Paints

Smart Care Crack Seal.




In case of dents and holes use Asian Paints Acrylic Wall Putty or white cement and fine sand in the ratio 1:3 For interior surfaces or

FILLING FOR HOLES & DENTS

substrates that are subjected to continuous seepage or dampness, kindly use Asian Paints SmartCare Damp Block before the top coat application.

PAINT APPLICATION PROCESS

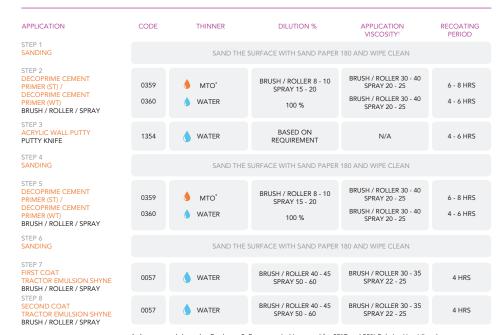

1. As measured through a Ford cup. 2. Recoat period is quoted for 25°C and 50% Relative Humidity, these may vary under different conditions, * Mineral Turpentine Oil



HOW TO CHOOSE COLOURS

Browse through Asian Paints colour tools to help you find the right colour combination

COLOUR SPECTRA FAN DECK

TRACTOR EMULSION GRIHAKALA DÉCOR GUIDE



TRACTOR WALL FINISHES SHADE CARD



*These shades are for reference only. Please refer to the Colour Spectra or Colour Palette for correct shade reference

ADDITIONAL INFORMATION

POST PAINTING CARE

For removing stains, clean the surface using sponge with a mild soap solution. Once you finish, wipe the surface clean. Ensure drying time of 1 week for the paint before cleaning.

TECHNICAL DETAILS

- **a. Drying time:** Surface dry time 30 minutes
- **b. Sheen levels:** 5 8 at 60° GH
- c. Flash point IS101/1987 Part 1, Sec 6: NA
- **d. Stability of thinned paint:** To be used within 24 hours

PRECAUTIONS

- Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hours of application.
- Do not over-thin or over-extend the brush.
- > Tint using Asian Paints machine colourants only
- > Stir well and strain before use.
- Tinted paints need thorough shaking immediately after tinter addition as well as before use.

SAFETY FEATURES

- Xindly refer to the MSDS for Asian Paints Tractor Emulsion Shyne which gives detailed information on safety measures while handling the paint, which is available on request.
- > Store the container with the lid tightly closed in an upright position, in a cool, dry place
- > Keep out of reach of children and away from eatables.
- > May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- > Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not breathe vapour or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation.
- > Do not pour leftover paint down the drain or in water courses.
- In the event of spills, contain spillage using sand or earth.
- > No added Lead, Mercury or Chromium compounds.